



Oldcastle BuildingEnvelope®

STORMMAX FG-5100T
INSTALLATION AND GLAZING MANUAL

*Note: Installation and Glazing Manuals are product specific. **FOR REVIEW ONLY!***

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

TABLE OF CONTENTS

	Page No
General Information	2 - 3
1 FRAME FABRICATION	
1.1 Measuring opening and sizing frame	4 - 5
1.2 Cutting material	6
1.3 Vertical Mullion fabrication	6
1.4 Head and sill fabrication	7
1.5 Jamb mullion fabrication	8
1.6 Subsill fabrication	9
2 FRAMING ASSEMBLY	
2.1 Subsill end dam fabrication and assembly	10 - 11
2.2 Frame panel assembly	12
3 FRAME INSTALLATION	
3.1 Subsill sealant and splice	13
3.2 Installation of panel frames	14
3.3 Sealant at Jambs	15
4 WET GLAZING OPTION	
4.1 Glazing preparation	16
4.2.1 - 2.5 Setting of glass and exterior gasket sealant	17 - 18
4.2.6 - 7 Interior structural sealant application	19
DRY GLAZING OPTION	
4.3 Glazing preparation	20
5 DOOR INSTALLATION	
5.1 Preparation of door frame	21
5.2 Installation of door frame	22
5.3.1 - 3.8 Door preparation and glazing	23 - 24
5.4 Entrance door frame installation	25
FG-5100T Parts, Extrusions and Accessories	26

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

GENERAL INFORMATION

GENERAL INFORMATION:

Oldcastle BuildingEnvelope® FG-5100T (2-1/2" x 5") impact resistant storefront system represents the latest in product development technology. This system was especially designed to meet the stringent requirements of Miami-Dade County and Florida Building Codes as well as the International Building Code for glass and glazing systems. FG-5100T successfully passed a series of large missile impact and cyclic wind test with a variety of impact-resistant glass.

BUILDING CODES:

Oldcastle BuildingEnvelope® does not control the application nor selection of its product configurations, sealant or glazing materials and assumes no responsibility thereof. It is the responsibility of the owner, architect, and installer to make these selections in strict compliance with applicable laws and building codes.

STRUCTURAL SEALANTS:

Dow Corning 995 structural sealants were used on the FG-5100T test specimen for glass to metal adhesion approved by Miami-Dade County. To comply with Miami-Dade County and Florida Building Code Protocols, Dow Corning 995 sealant must be used for glass to metal adhesion with FG-5100T.

PERIMETER SEALANTS:

Due to varying job conditions, all perimeter sealants used should be approved by the sealant manufacturer to ensure the sealant will function for the conditions shown on these instructions and shop drawings. Sealants must be compatible with all surfaces in which adhesion is required, including other sealants surfaces. Use primers where directed by sealant manufacturer. Be sure to properly store sealants at recommended temperature and check container for remainder of shelf life before using. Dow Corning 795 or 995 silicone sealant was the perimeter sealant used on the FG-5100T test specimen approved by Miami-Dade County.

MATERIAL HANDLING:

SHOP

1. Cardboard wrapped or paper interleaved material must be kept dry.
2. Check arriving materials for quantity and keep record of where various materials are stored.

JOB SITE

1. Material at job site must be stored in a safe place well removed from possible damage by other trades.
2. Cardboard wrapped or paper interleaved materials must be kept dry.
3. Keep record of where various materials are stored.
4. Protect materials after erection. Cement, plaster, and other alkaline solutions are very harmful to the finish.

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

GENERAL INFORMATION

CLEANING

Aluminum shall be cleaned with plain water containing a mild detergent, or a petroleum product such as white gasoline, kerosene, or distillate. No abrasive agent shall be used.

GENERAL CONSTRUCTION NOTES

- A. Study these instructions, shop drawings, erection drawings and architectural drawings before starting any work.
- B. All materials are to be installed plumb and level.
- C. All work should start from an established benchmark and column centerlines established by the architect and the general contractor.
- D. Completely check construction which will receive your materials against contract documents. Notify the general contractor by letter of any discrepancies before proceeding with your work since this constitutes acceptance of work by other trades.
- E. Protect all aluminum to be placed directly in contact with uncured masonry or incompatible materials with a heavy coat of zinc chromate or bituminous paint.
- F. Follow installation and glazing instructions.
- G. After sealant is set and a representative amount of the wall has been glazed (500 square feet or more), run a water hose test to check installation. On large jobs, hose test should be repeated during glazing operation. Test should be conducted in accordance with AAMA 501.2 specifications.

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME FABRICATION

1.1 Establish Frame Size & Cut Metal to Length

Measure width of rough opening.


- A. Measure opening at bottom.
- B. Measure opening at center.
- C. Measure opening at top.

The frame width will be the smallest dimension less 1/2" allowing for a 1/4" caulk joint at each jamb.

Repeat process to determine frame height.


- A. Beginning on left side of opening, measure dimension from top to bottom.
- B. Repeat at center.
- C. Repeat at right side of opening.

The frame height will be the smallest dimension less 5/8" to allow for subsill and a 1/4" caulk joint at the head and sill.

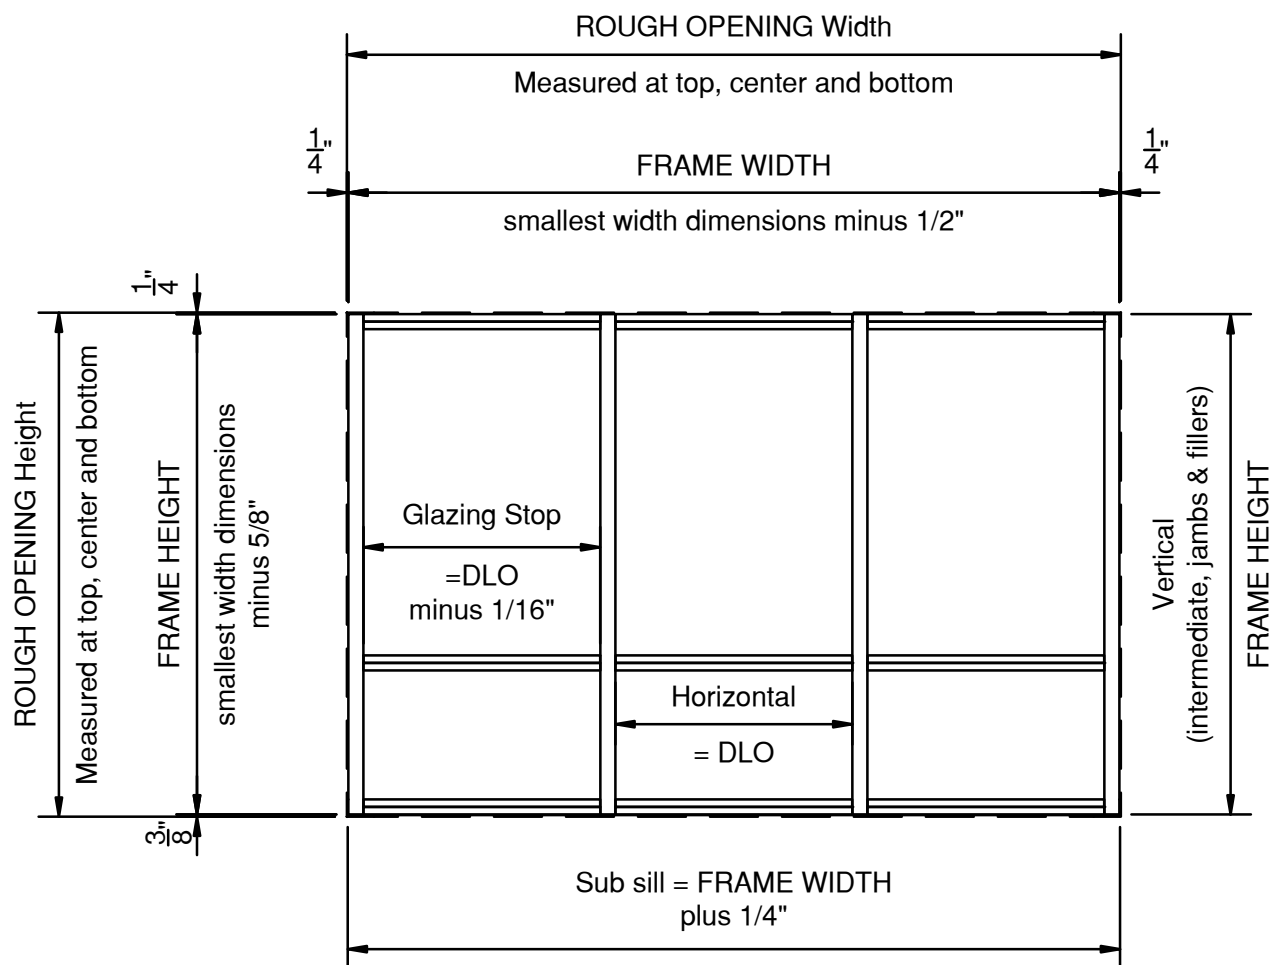

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME FABRICATION

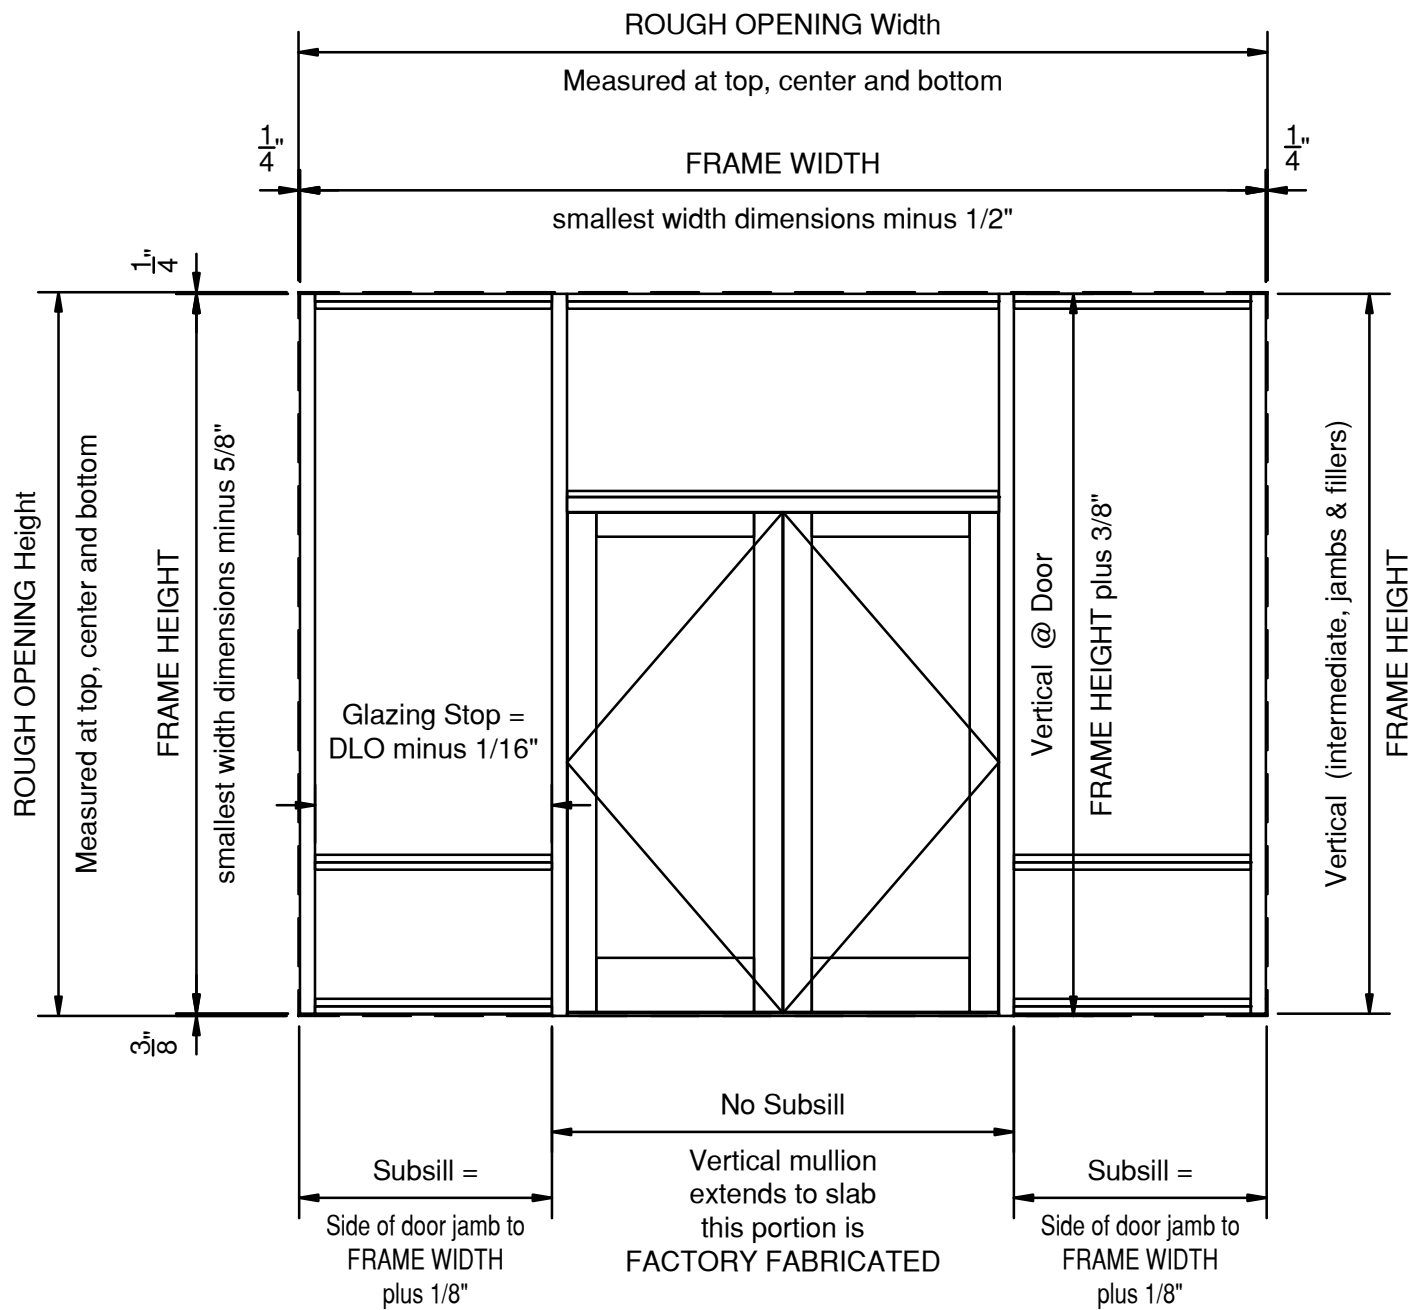

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME FABRICATION

1.2 Cut material to size.

Framing Members

FG-5215 Subsill flashing at frames without doors	Frame Width plus (+) 1/4".
FG-5215 Subsill at entrance locations	Door jamb to Frame Width plus (+)1/8". (Subsill is to butt tight against door jamb(s) and is cut 1/8" longer than width of side light(s) on either side of door frame.)

Verticals

FG-5218 Jambs	Cut to Frame Height.
FG-5216 Vertical Mullions and FG-5217 filler	Cut to Frame Height.

Horizontals

FG-5214 Horizontal and FG-5213 Head/Sill	Cut to D.L.O.
Slide in FG-5177 Glass Stops	Cut D.L.O. minus(-) 1/16"

1.3 Drill or punch holes in verticals for attaching horizontals.

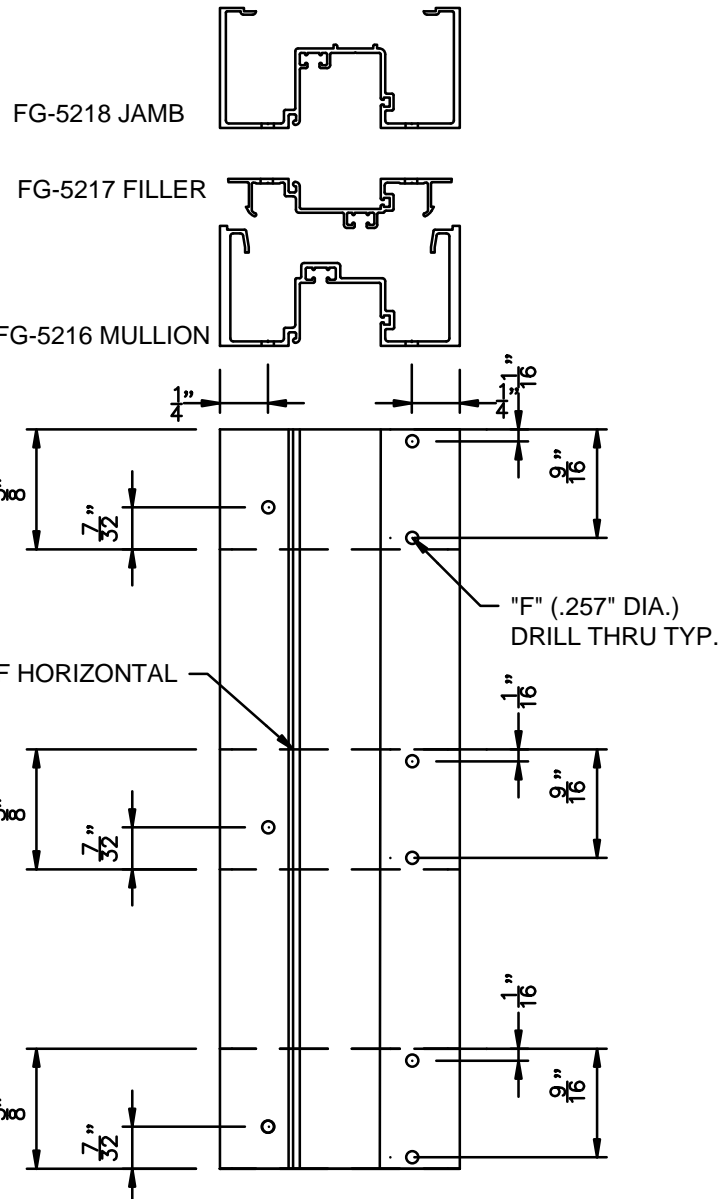


Figure 1
Vertical Mullion Fabrication

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME FABRICATION

WET GLAZED FRAMING

- 1.4 Fabricate head and sill for anchor holes, the number of anchors vary based on substrate material. Reference anchor charts for number of anchor holes and locations for each substrate. First hole is always 2" from end, each additional fastener hole are at required minimum spacing.

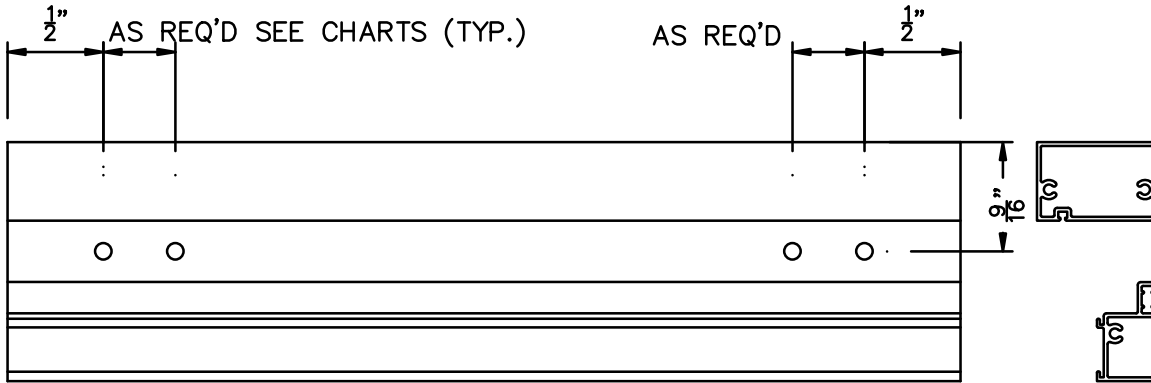


Figure 2
Head & Sill Fabrication

FG-5213
HEAD /
SILL

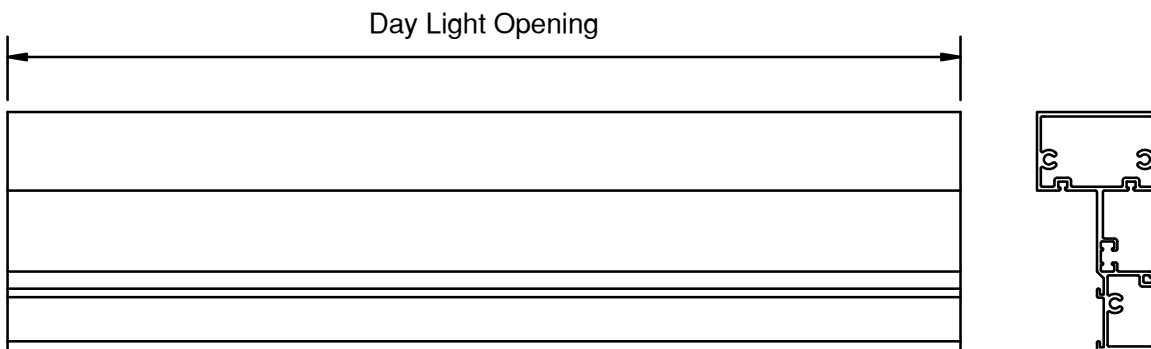


Figure 3
Horizontal Fabrication

FG-5214
HORIZONTAL

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME FABRICATION

WET GLAZED FRAMING

- 1.5 Fabricate wall jamb for anchor holes. number of anchors vary based on substrate material. Reference approved shop drawings, for locations for each substrate.

NOTE : refer to 1.3 and figure 1 for hole pattern at head,sill and horizontals.

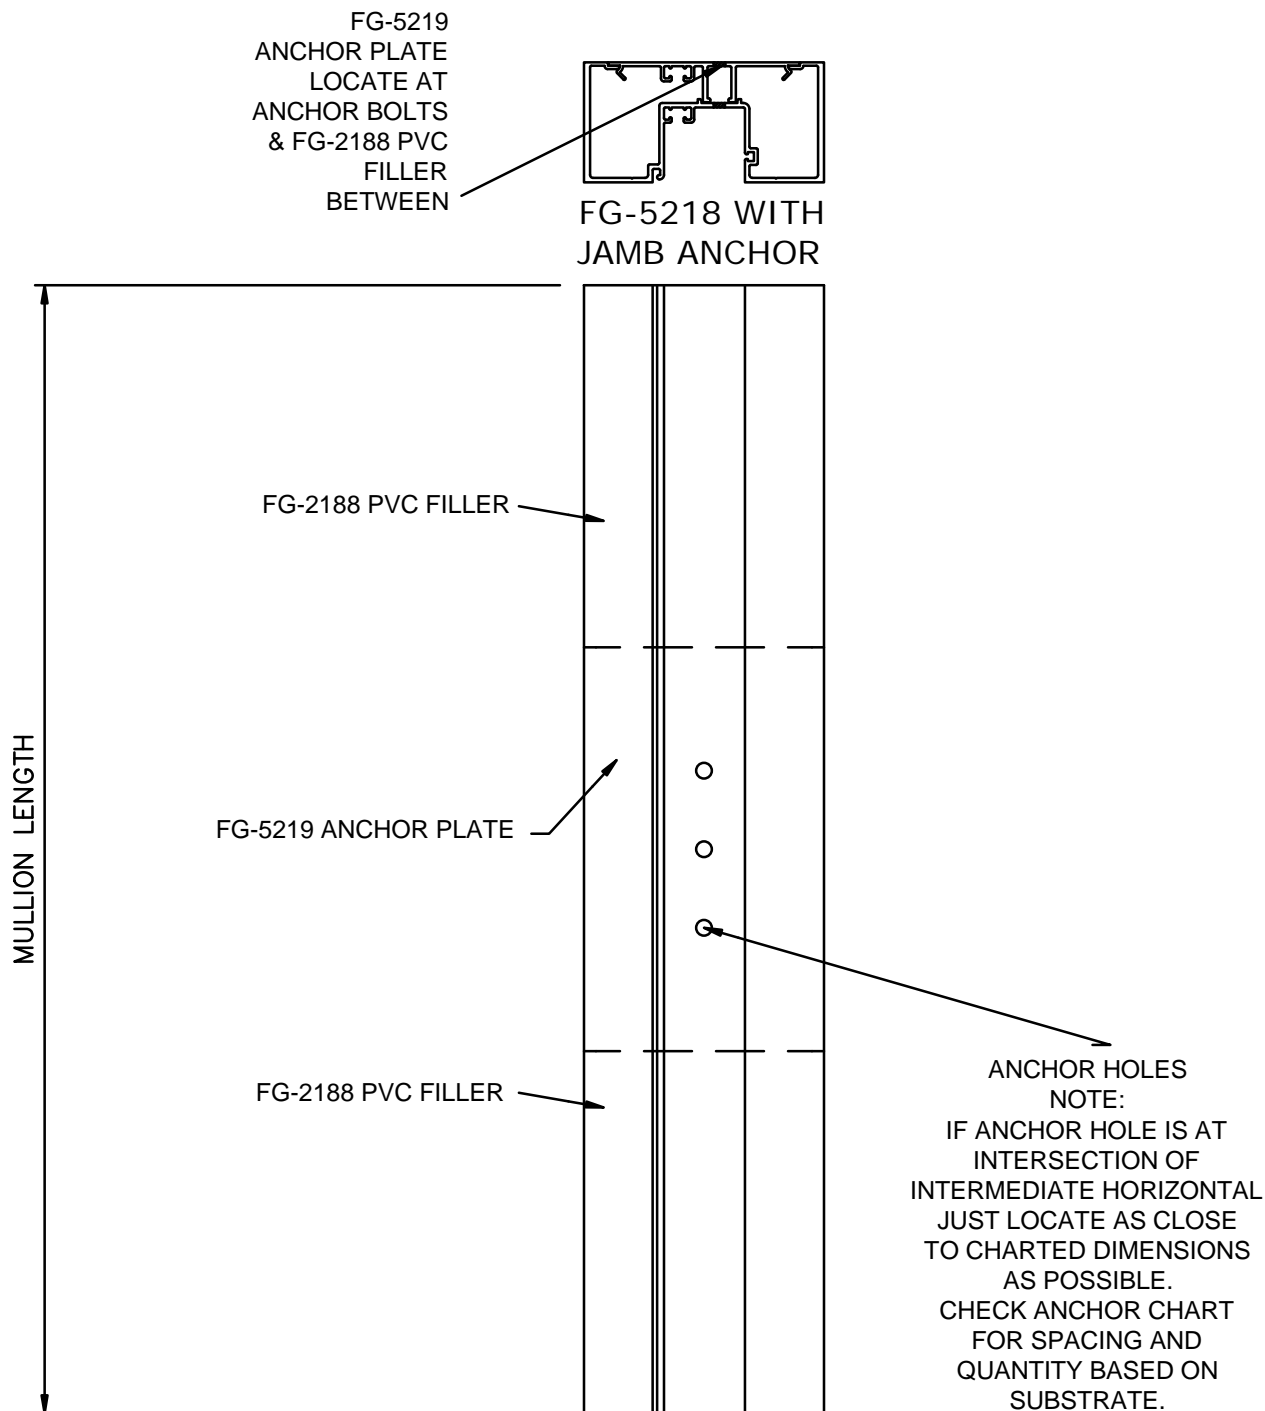


Figure 4
Jamb Fabrication

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME FABRICATION

- 1.6 Fabricate FG-5215 subsill flashing for end dams and non-structural fastener holes. Hole location dimensions for fasteners in subsill are approximate.

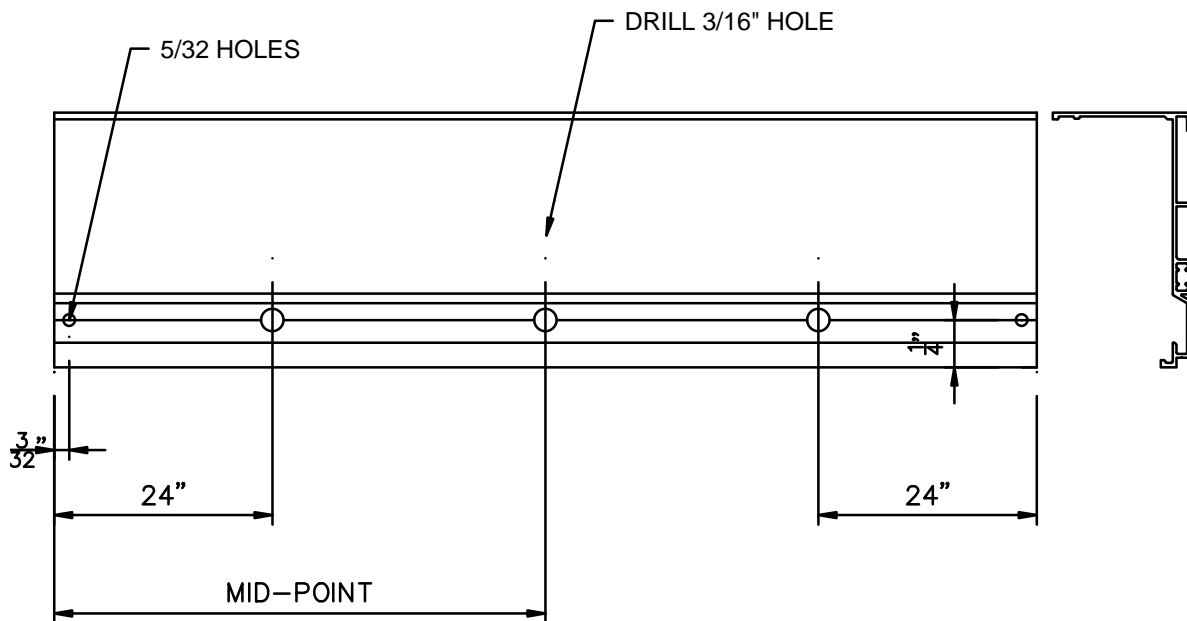


Figure 5
Subsill Fabrication

1. Drill 3/16 dia. hole for non-structural fasteners used for attaching subsill to substrate as shown. Repeat this hole pattern for each additional 12'-0" of length or as required to temporarily hold subsill in place until structural fastener sare installed.
2. Drill one 5/32 dia. holes at each end (except end abutting a door jamb)for attaching FG-5000-FP-11 end dams. Countersink for #10-24 x 3/8 UCPFH screw.


StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME ASSEMBLY


WET GLAZED FRAMING

2.1 Apply Isocryl tape to end dam and assemble to subsill.

See Figures 8 and 9 on Page 11 for sealant to be applied during installation.

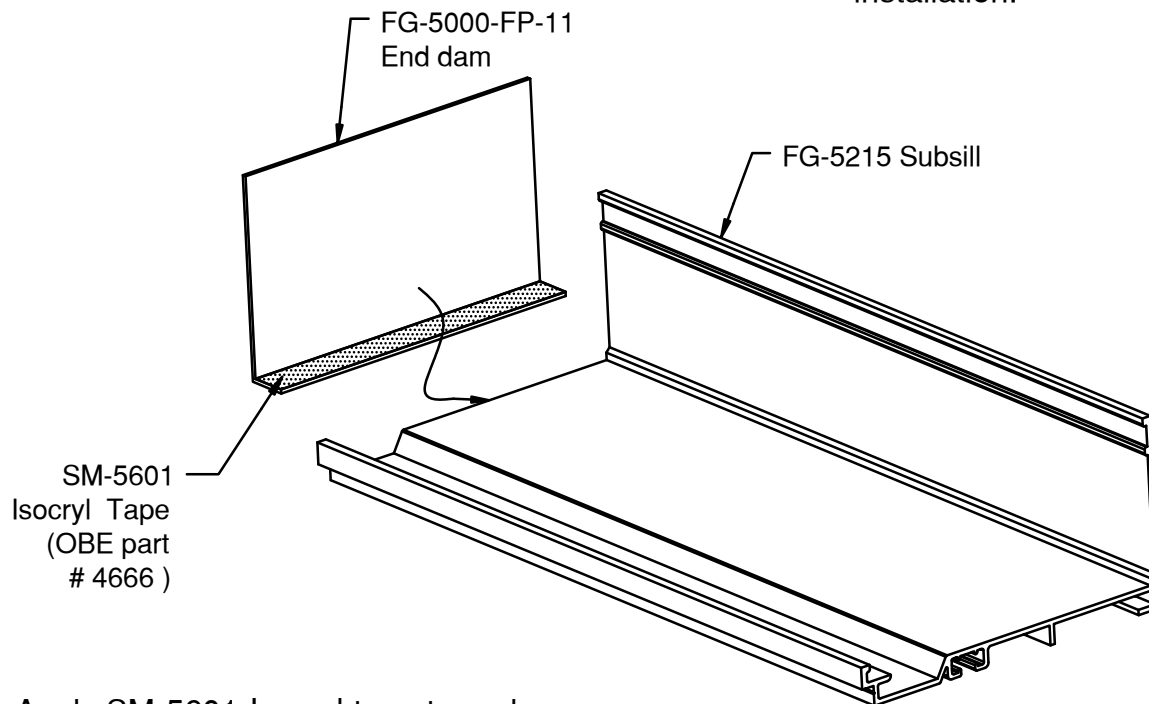

Apply SM-5601 Isocryl tape to end dams as shown and stick to the ends of subsill

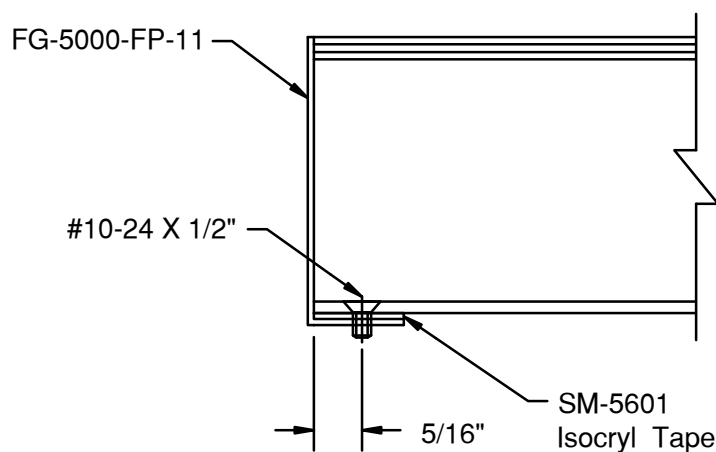

Match drill holes in subsill end dam with 5/32"Ø drill. Attach with two each #10-24 x 3/8" screws as shown.

Figure 6
Subsill End Dam Attachment

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME ASSEMBLY

2.1 a. Weep Hole Fabrication

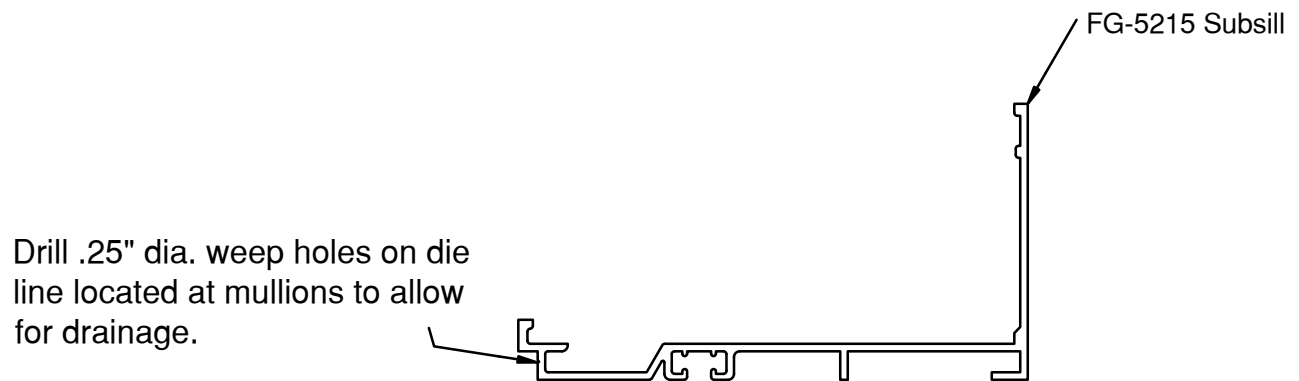


Figure 6a
Subsill Weep Hole Fabrication

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME ASSEMBLY

WET GLAZED FRAMING

2.2 Frame Panel assembly.

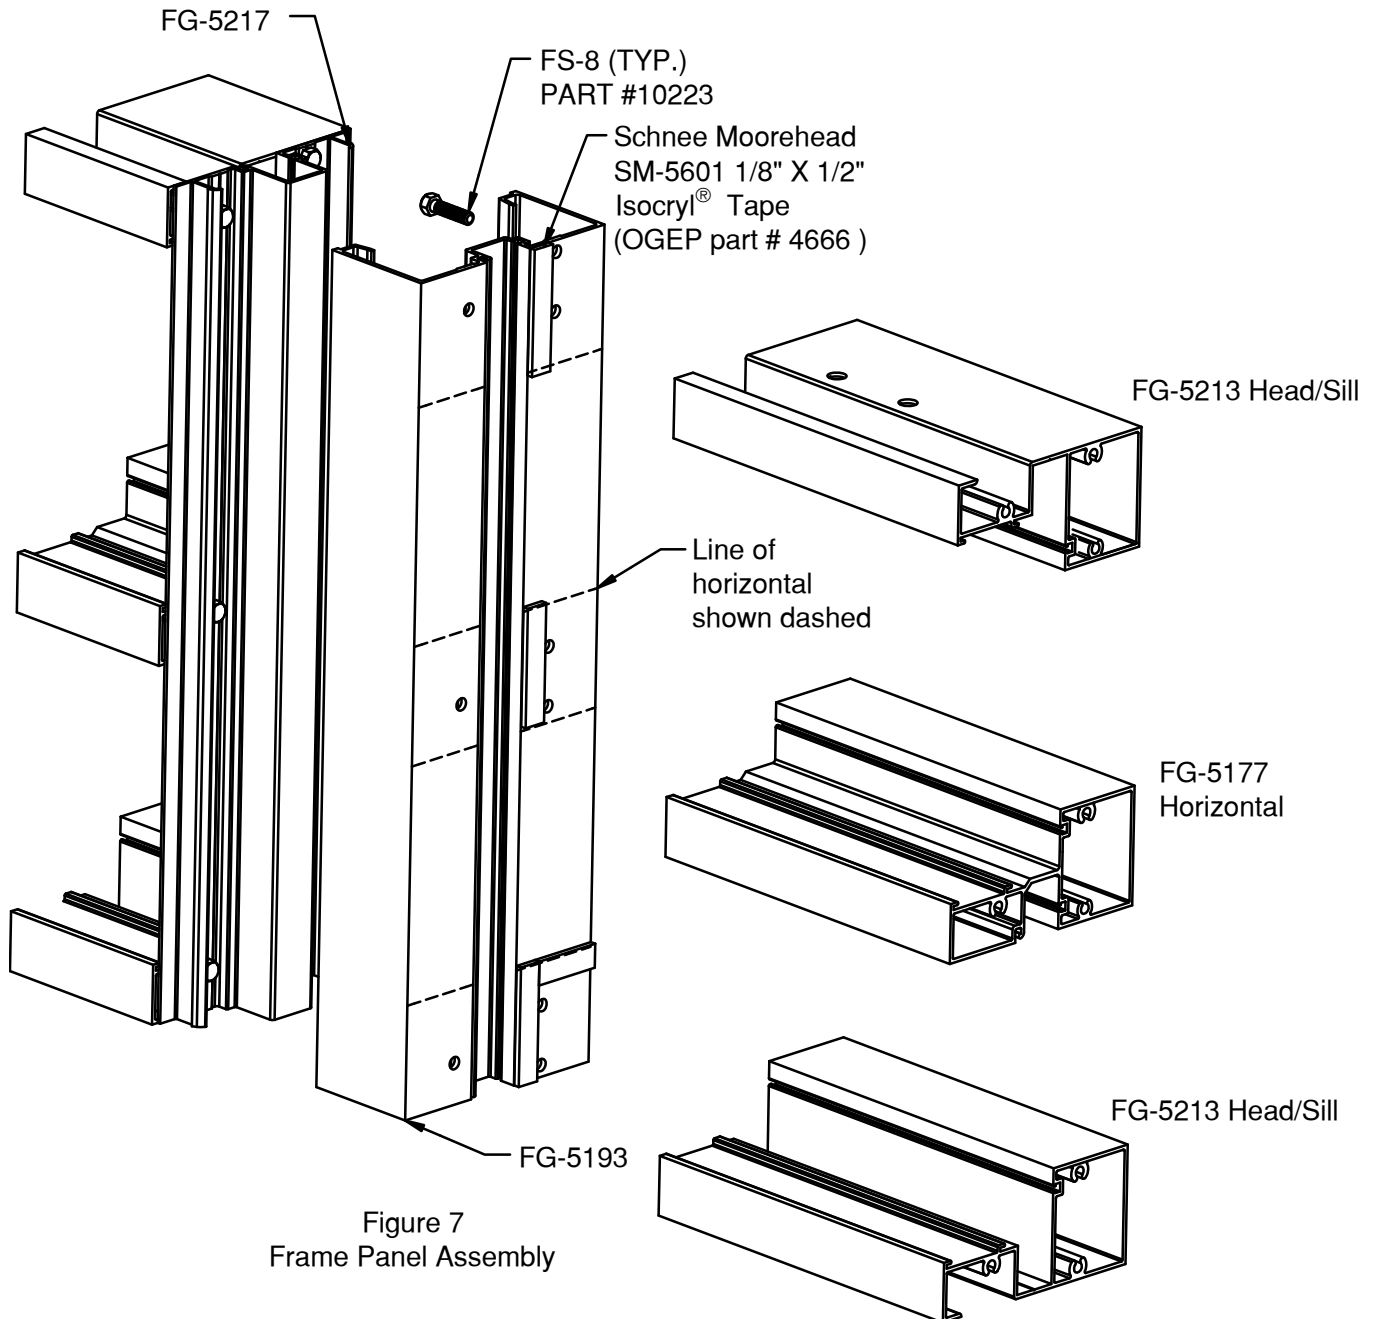


Figure 7
Frame Panel Assembly

- 2.2.1 Clean framing members at locations where Isocryl® Tape is noted to be attached. SEE FIGURE 7, at tape intersection there should be no gaps.
- 2.2.2 Install FG-5185 Wet Glaze spacer gasket on vertical members, prior to assembling horizontals, sill and head members. Spacer gasket runs through entire length of vertical members. .
- 2.2.3 Attach horizontals to verticals using (3)FS-8 (#14 x 1" sts spline screws) Trim excess sealant tape at joints with razor knife. DO NOT PULL TAPE TO TRIM. See sheet 4 figure 1 for hole prep locations.


StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME INSTALLATION

DRY & WET GLAZED FRAMING

3.1 Subsill installation


- 3.1.1 Position fabricated subsill with end dams into opening. Center into opening allowing shim space at jambs. Shim to level with 1/4" of shim @ highpoint of opening, adding shims at each fastener.

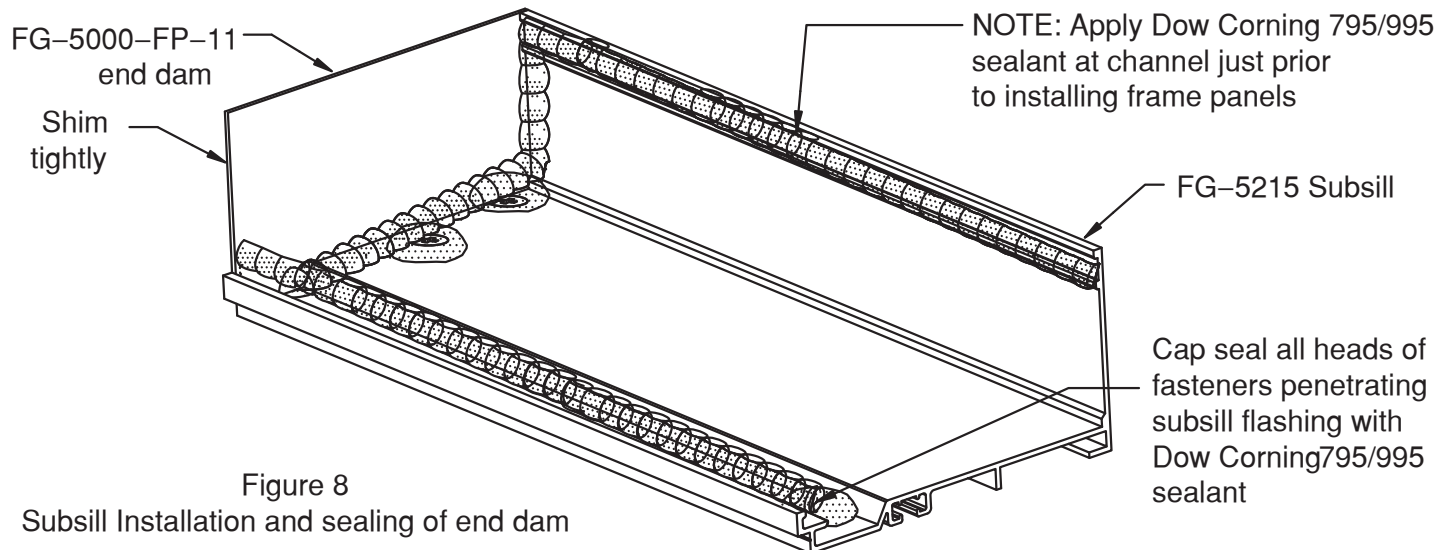

- 3.1.2 Wedge shims tightly between end dams and jamb substrate at each end prior to installing frame panels. These shims prevent the end dams from being dislodged while frame panels are being installed. Completely seal end dams as shown See Figure 8.

- 3.1.3 Apply sealant to 0.040" silicone splice sheet as shown at all subsill splices.
See Figure 9.

- 3.1.4 Run a continuous bead of Dow Corning 795 or 995 sealant along the full length of the sub sill channel as shown above just prior to installing frame panels. Do not allow sealant to harden prior to installing frame panels. Remove excess sealant after panels are installed.

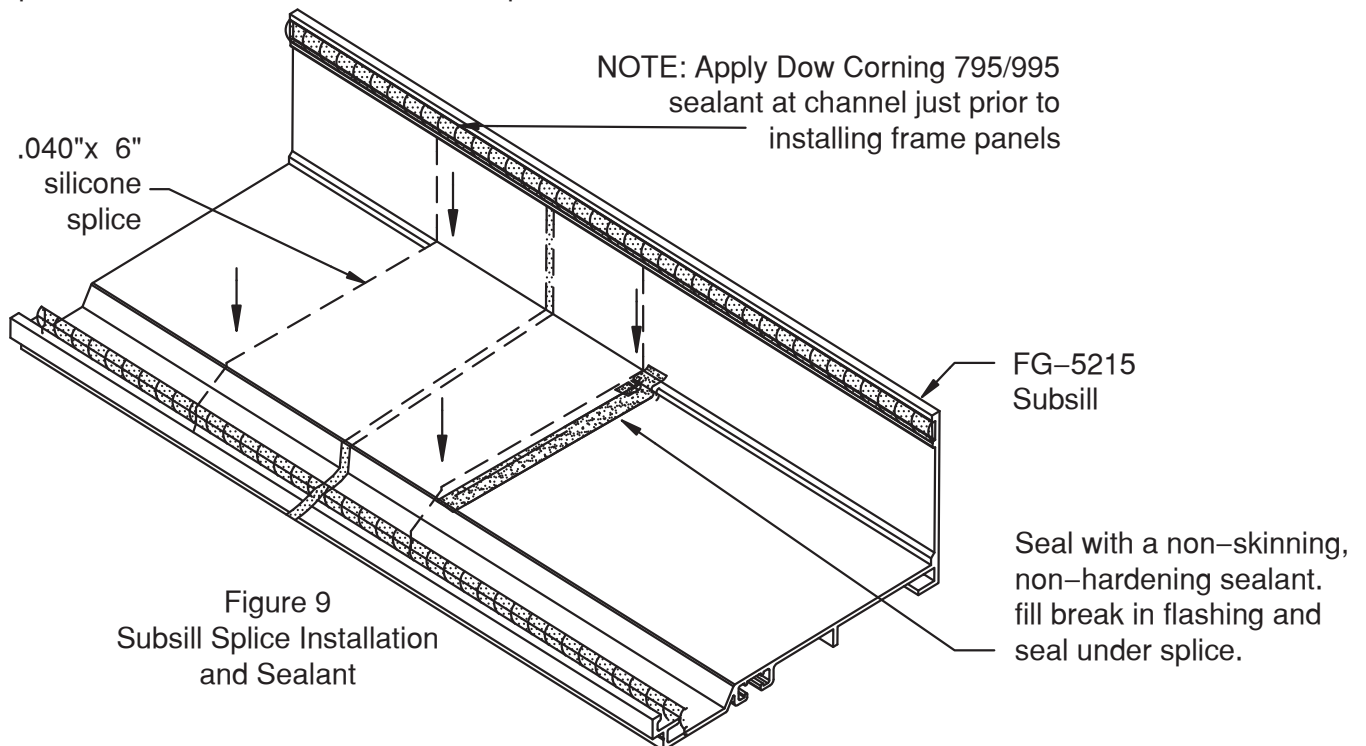

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL


FRAME INSTALLATION

3.2 Installation of framing panels.

3.2.1 Install assembled frame panels into opening starting at either jamb and continue working toward the other jamb until the last frame panel is installed. Ensure that the frame panels are pushed tight against the upright leg of the subsill. Remove excess sealant after panels are installed and anchored.

3.2.2 Prior to assembling each additional panel frame,
apply 12" of Dow Corning 795/995 silicone to
bottom of interior snap engagement.

See Figures 10 below .

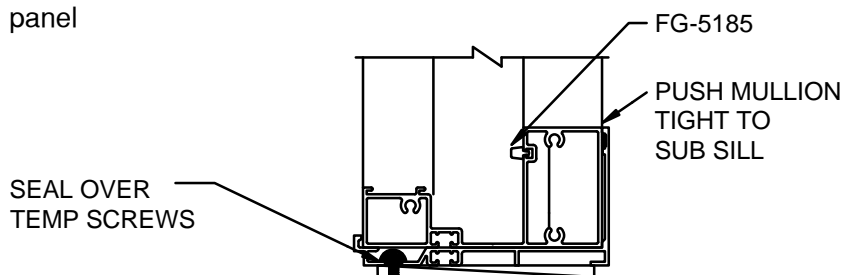

Detail A
Frame Panel Installation to Subsill

Prior to inserting and engaging
Filler in to mullion apply 12" of
Dow Corning 795/995 silicone
as shown. Remove excess
squeeze out after frame in
anchored

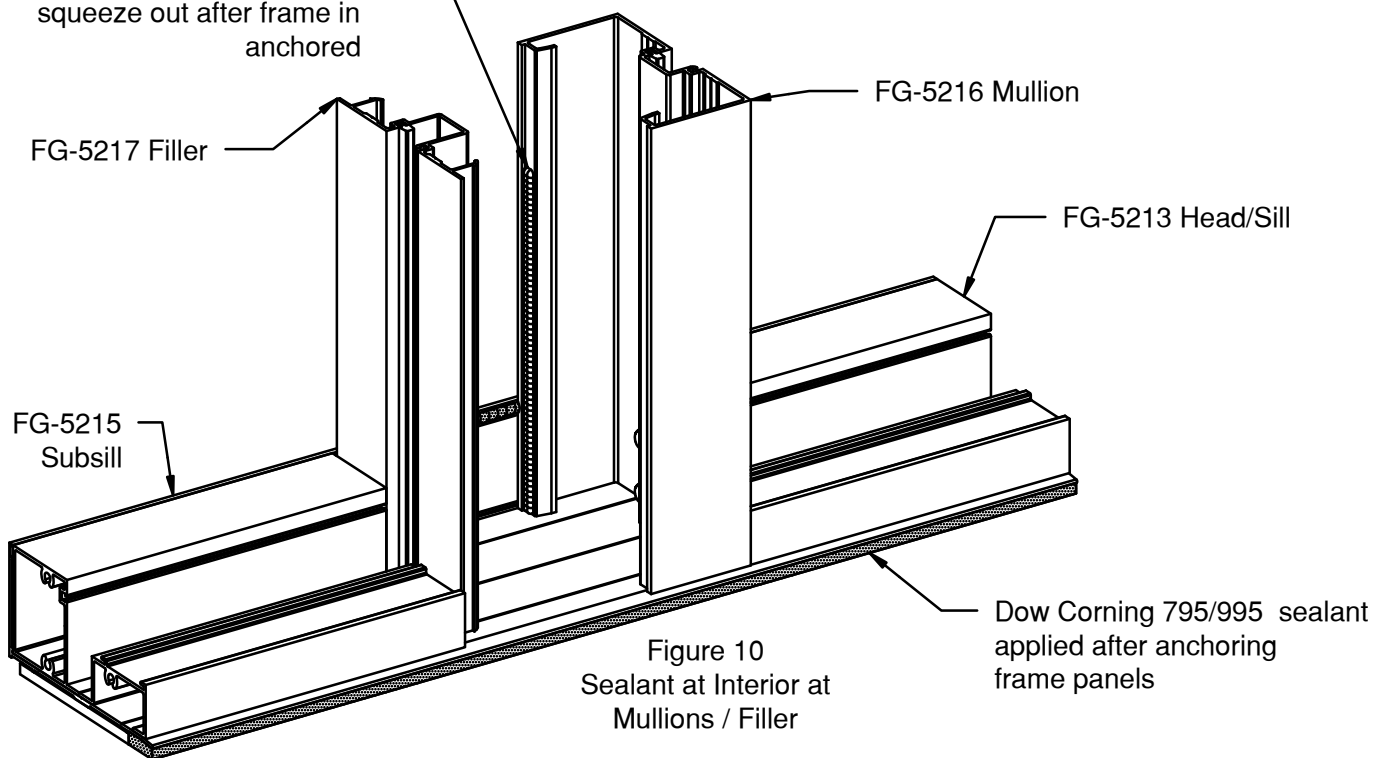


Figure 10
Sealant at Interior at
Mullions / Filler

3.2.3 After all panels are installed, shim beneath subsill as required at fasteners. Match drill holes through sill into substrate. Remove dust from holes. Apply sealant into anchor holes prior to anchoring. Cap seal with Dow Corning 795 or 995 fastener heads.

3.2.4 Plumb vertical mullions, and match drill holes into substrate at head. Anchor and shim as shown. It is not necessary to cap seal fasteners at head. Check D.L.O. and diagonal dimensions every 4 bays to ensure correct spacing and frame squariness to prevent dimensional buildup.

3.2.4 Match drill holes in jamb to substrate. Anchor and shim as required. Cap seal fastener heads.

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

FRAME INSTALLATION


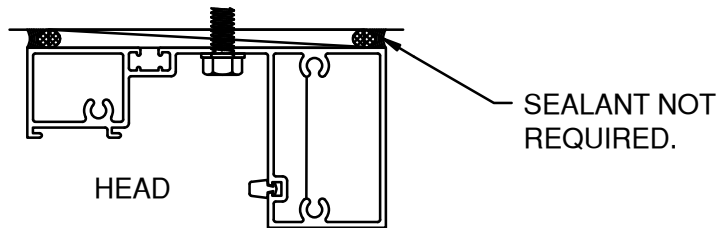


Figure 11
Sealant Application

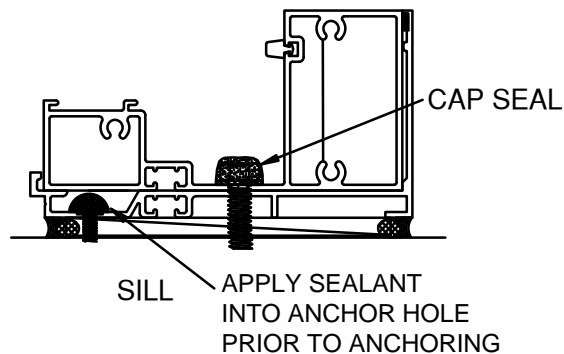

3.2.5 Once all individual frames are secured to the opening, then completely seal with a continuous bead of Dow Corning 795 or 995 silicone sealant or equal, across head and at each jamb. At the sill run a bead across the subsill.

3.3 Interior sealant @ jambs and along subsill
Starting from the bottom, seal up the jamb to a height of 24". It is not necessary to seal the balance of the jamb on the interior or beneath the interior side of the sub sill flashing other than for cosmetic reasons.

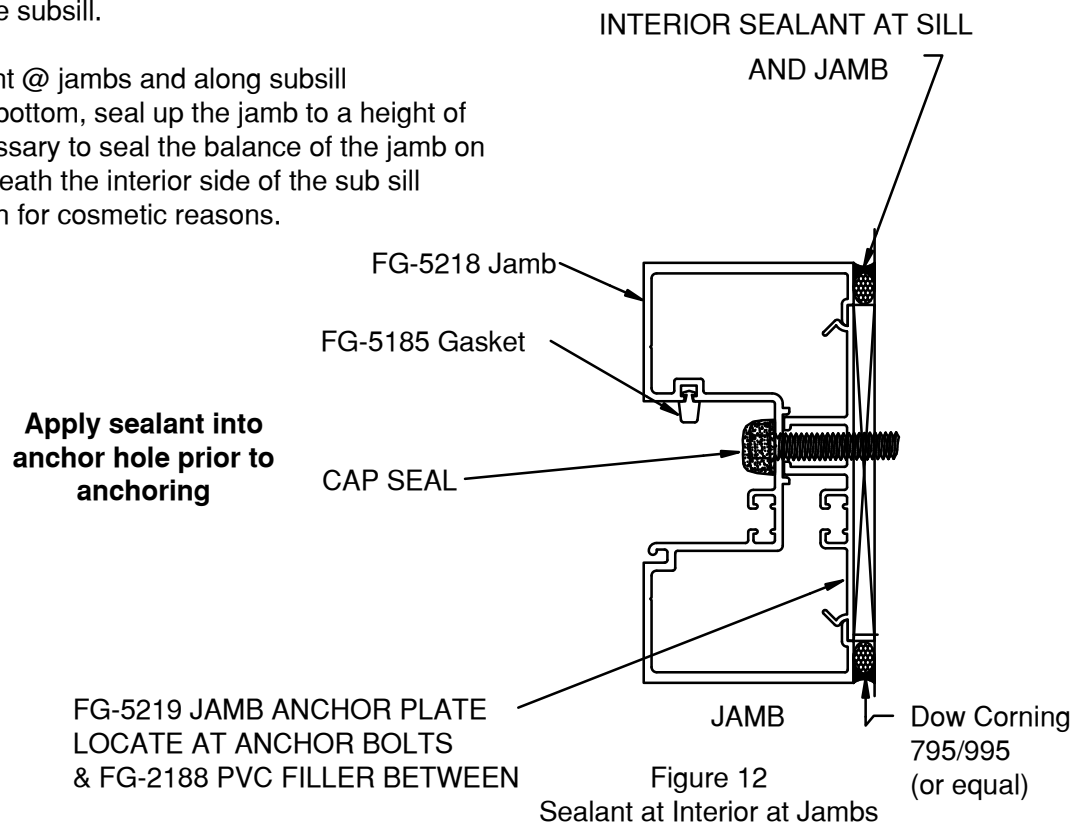


Figure 12
Sealant at Interior at Jamb

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

GLAZING

4.1 GLAZING PREPARATION -Wet Glazing option

- 4.1.1 Remove all debris from glazing pockets to prevent blockage of weeps/drains.
- 4.1.2 Install water diverters see Figure 13 after lower lite is in position.
- 4.1.3 Install FG-5185 spacer gasket in horizontal members
Note: also install FG-5185 at vertical , if it was not installed prior to attaching horizontals see Figure 7 on Page 12 .
- 4.1.4 At sill, install FG-5184 setting chair (2 per lite at 1/4 points)

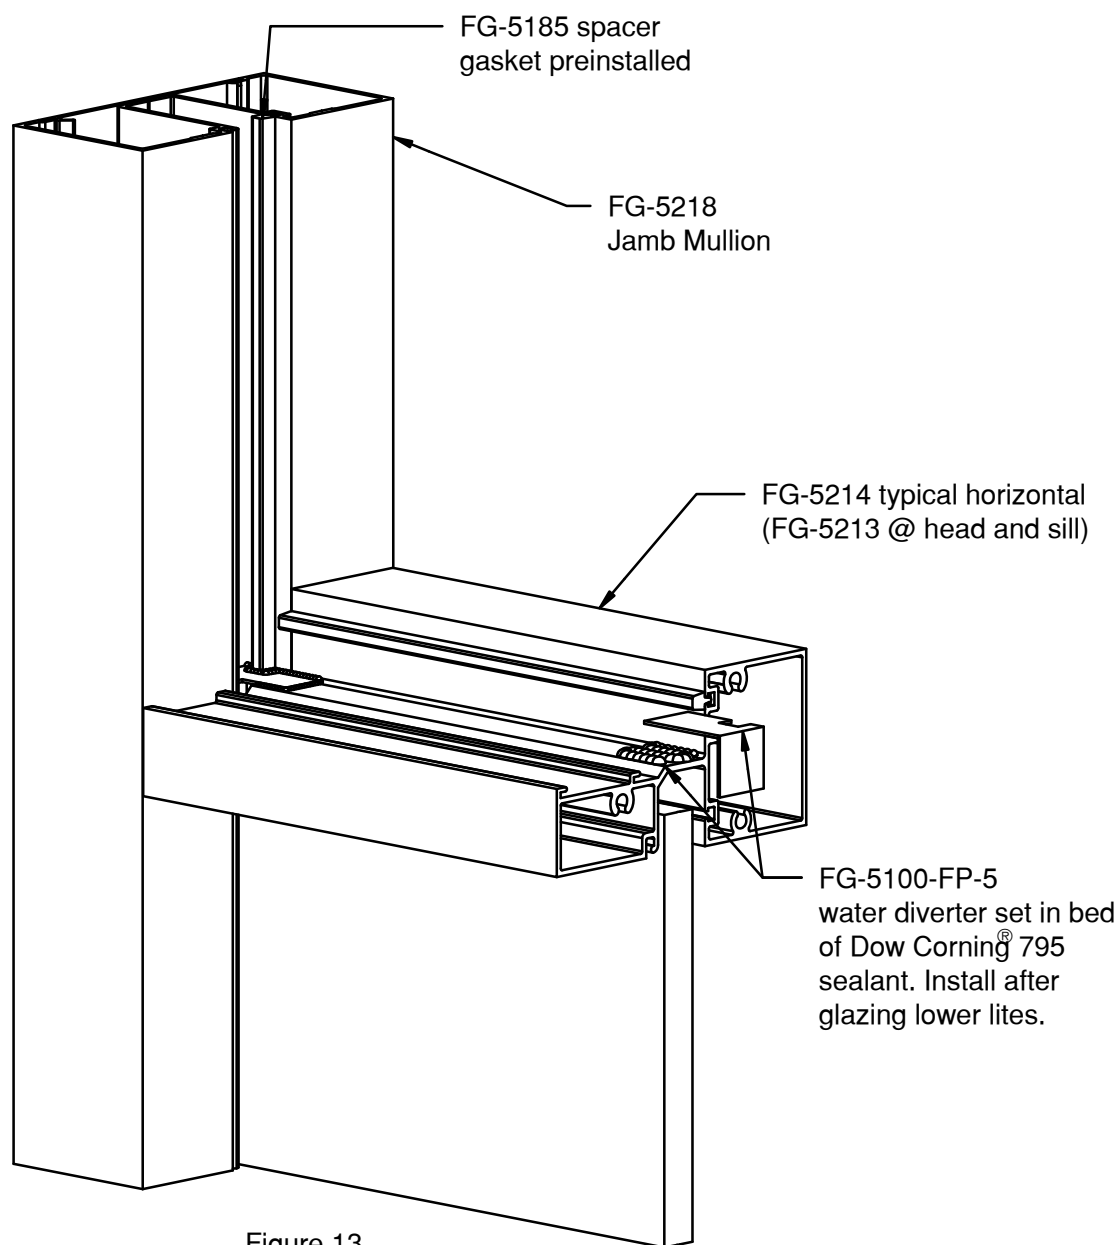


Figure 13
Water Diverter and Gasket Assembly

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

GLAZING

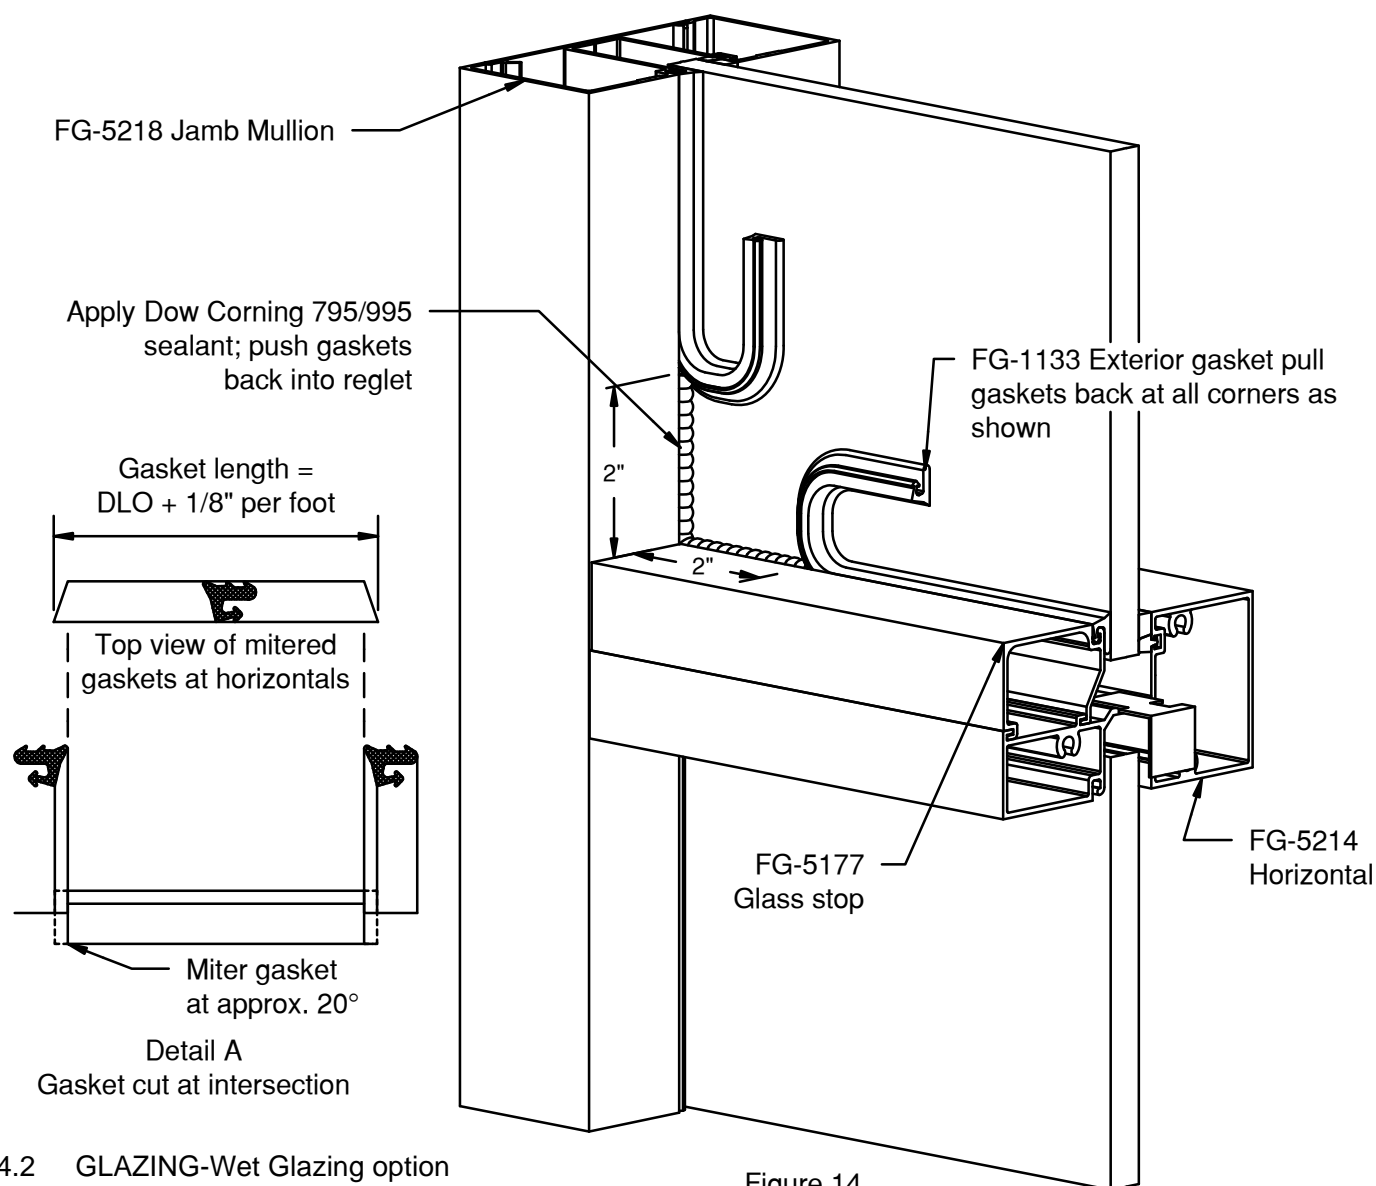


Figure 14
Exterior Gasket Installation

4.2 GLAZING-Wet Glazing option

Glaze from bottom to top.

- 4.2.1 Set glass into opening, push in to deep pocket first, at sill place glass on FG-5225 setting chair, then after centering in DLO, pull glass up and position FG-5186 setting block on setting chair (at 1/4 points) See figure 16 on sheet 10. At horizontal same procedure is used, except no setting chair is used.
- 4.2.2 Install exterior FG-5177 glass stops.
- 4.2.3 Install exterior FG-1133 glazing gaskets starting at the middle of the glass
- 4.2.4 Cut gaskets a minimum of 1/8" per foot longer than daylight opening to provide for adequate compression. as shown at Figure 14 detail A.
- 4.2.5 After gaskets are pressed in place. Pull gasket from pocket as shown in Figure 13 above. Clean glass and gaskets a minimum of 2" from each end with isopropyl alcohol. Apply Dow Corning® 795/995 sealant see Figure 14. Push gaskets into reglet, See Figure 15 on Page 17.

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

GLAZING

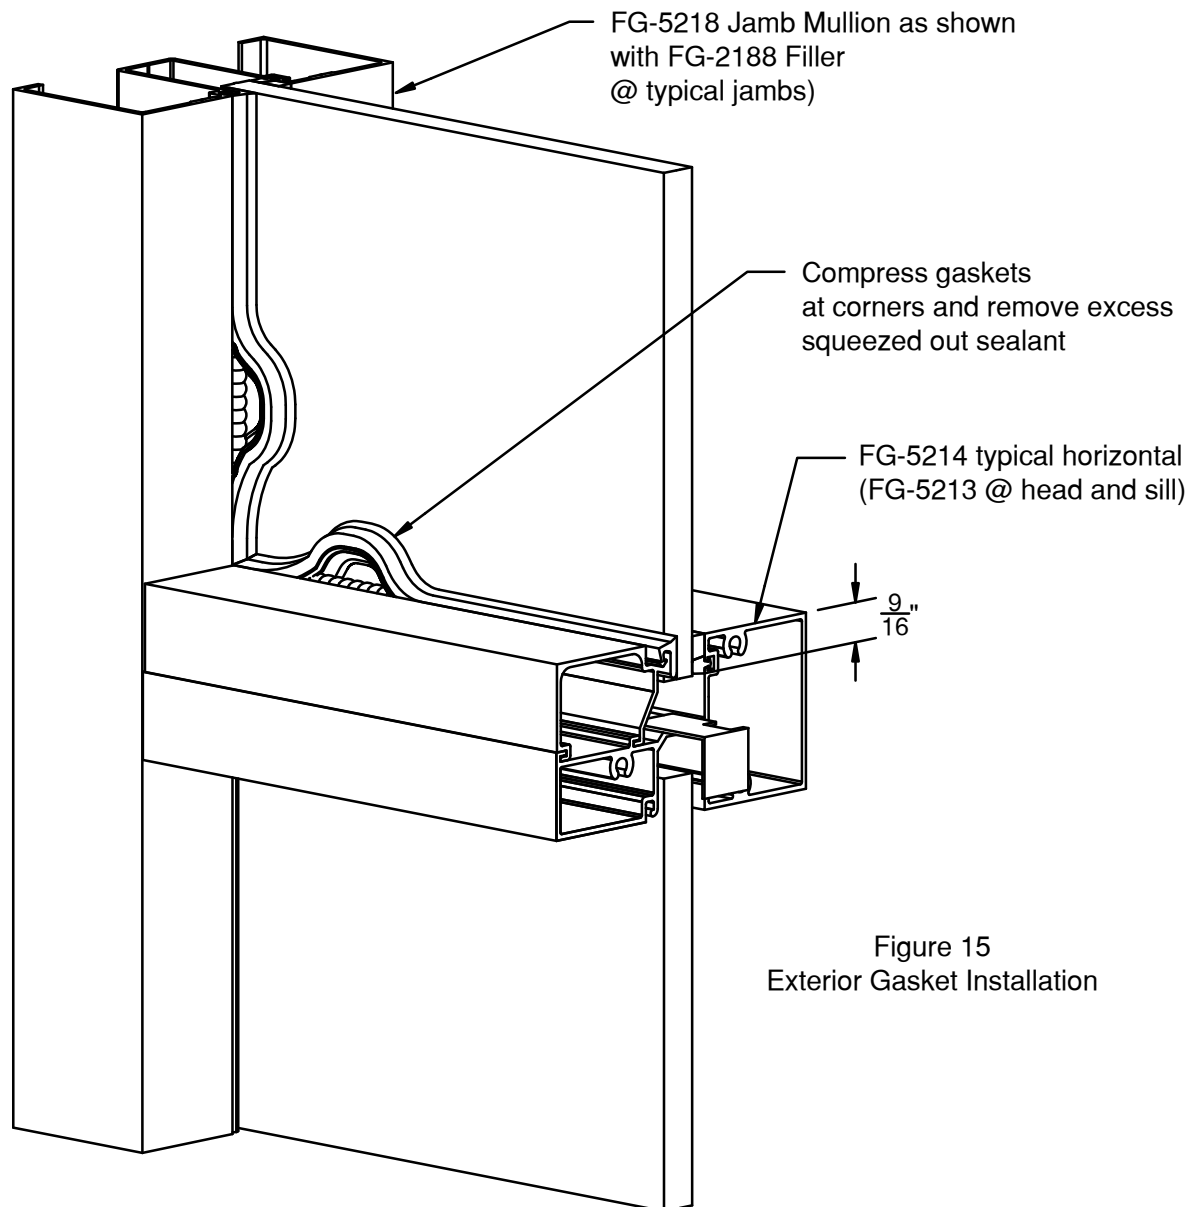


Figure 15
Exterior Gasket Installation


4.2 GLAZING-Wet Glazing option (Continued)

4.2.6 Mask off glass and aluminum with 1" wide (minimum) low adhesion masking tape. See Figure 16 . Working a single DLO at a time, Fill cavity around full perimeter of DLO with Dow Corning 995 sealant as shown, care should be taken not to leave any voids and eliminate air bubbles in sealant (See Detail. A) . Immediately tool , creating a finished joint with a beveled/curved joint surface See Detail B on page 19 .

4.2.7 Remove masking tape 10 minutes after tooling; taking care not to damage tooled sealant.

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

GLAZING

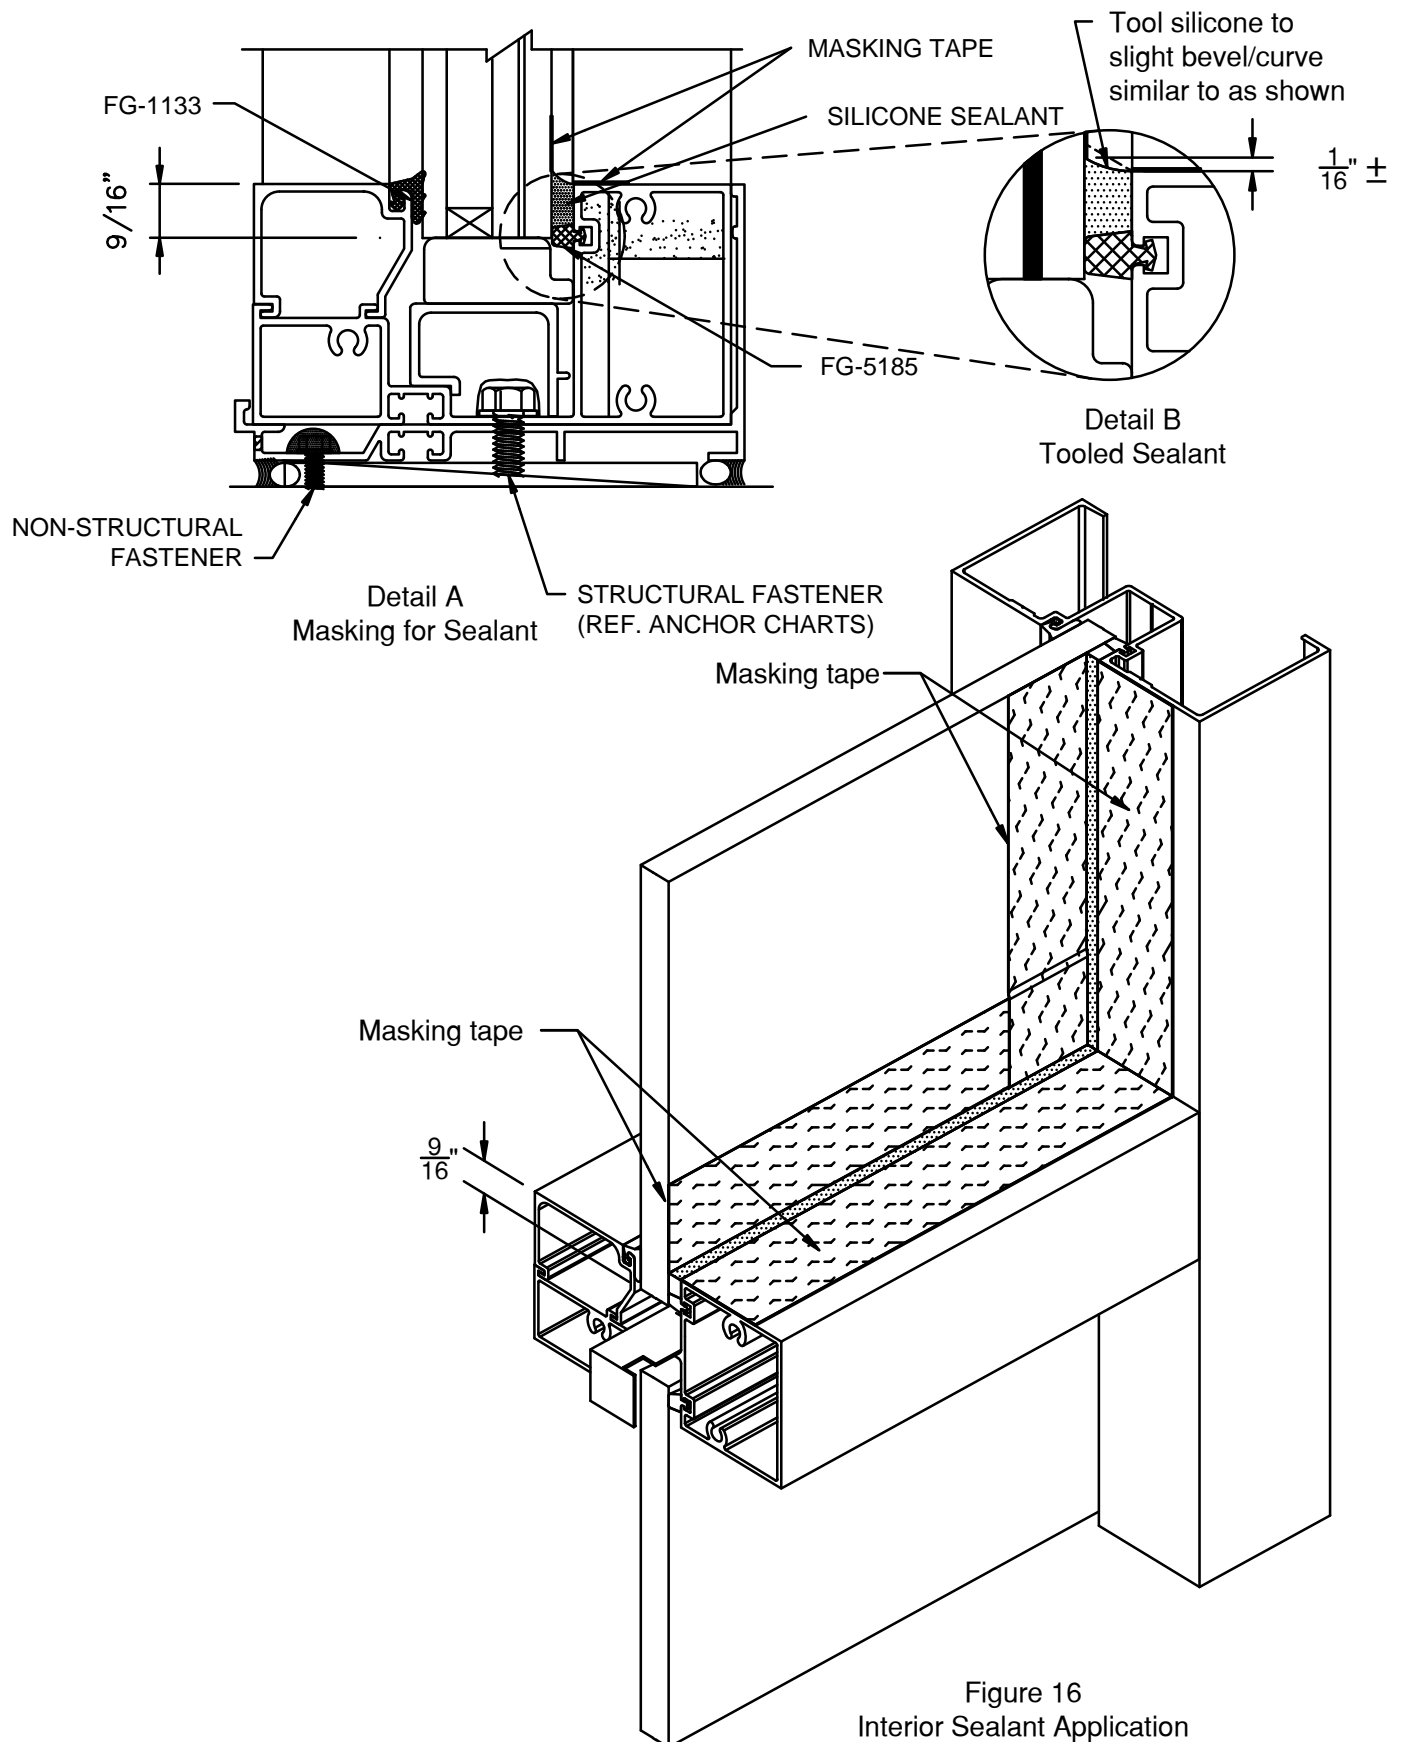

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

GLAZING - DRY GLAZED OPTION

FG-5218 Jamb Mullion as shown (FG-5218 Mullion and FG-5217 Filler @ typical mullions)

FG-5949 interior gasket cut to DLO plus 1½" (min)

4D.1 GLAZING PREPARATION -Dry Glazing option

4D.1.1 Remove all debris from glazing pockets to prevent blockage of weeps/drains.

4D.1.2 Install water diverters as shown on at Figure 17 after lower lite is in position.

4D.1.3 Install FG-5949 interior gaskets

- @ vertical mullions gasket is cut to DLO plus 1 1/2" (see detail "B" for notch)
- @ horizontals gasket is cut to DLO plus ¼" per foot of length,
- Start installation @ middle of DLO's.

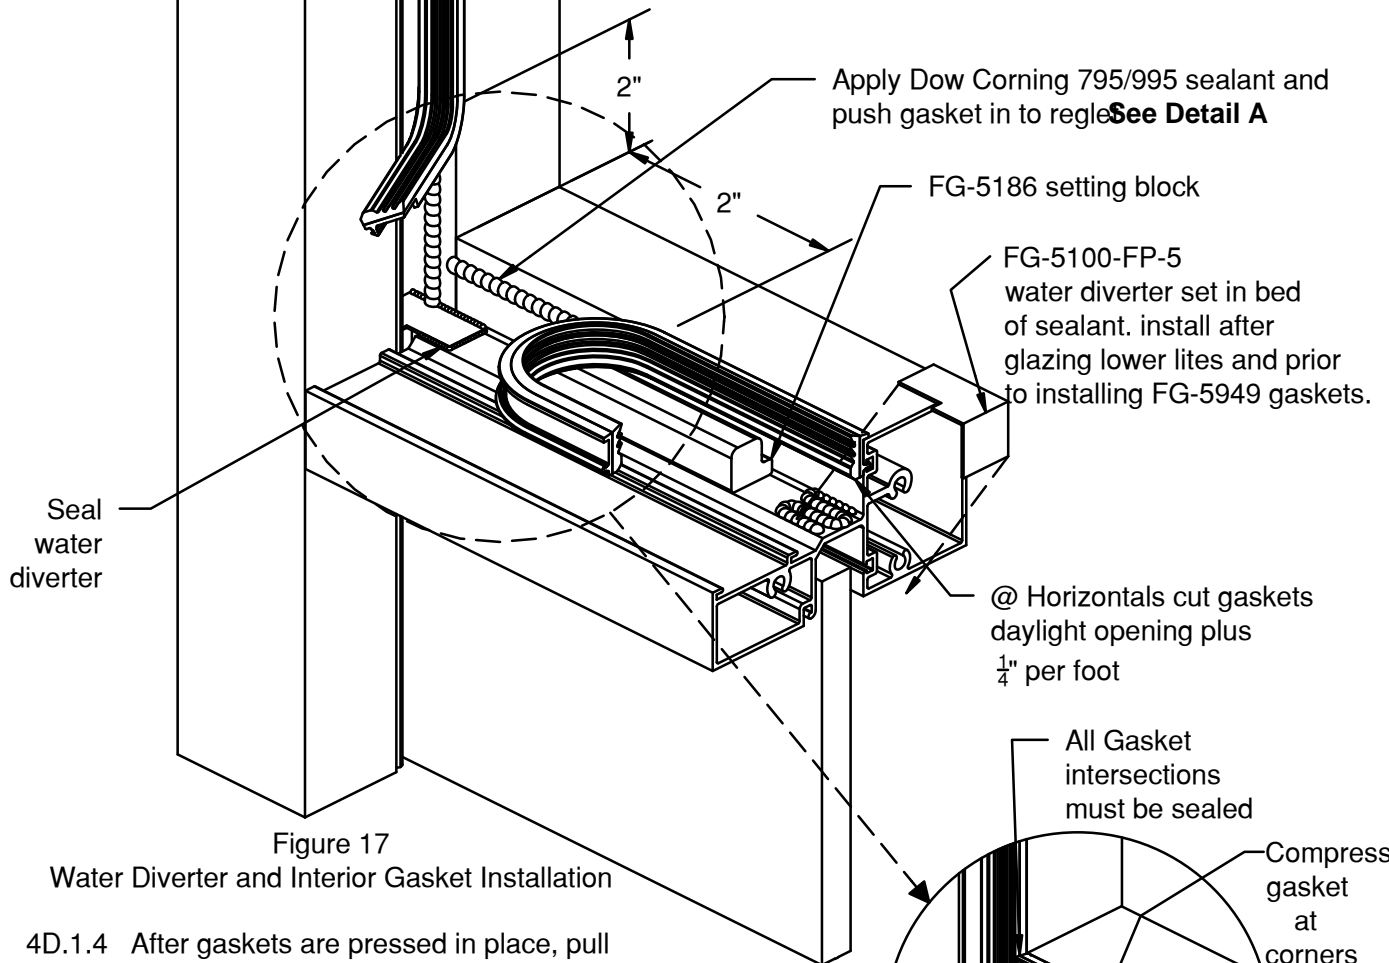


Figure 17

Water Diverter and Interior Gasket Installation

4D.1.4 After gaskets are pressed in place, pull gasket from pocket as shown in Figure 17 above. Clean glass and framing a minimum of 2" from each end. Apply Dow Corning 795/995 sealant to gasket raceway, see Figure 17. Push gaskets into reglet, See Details A & B.

4D.1.5 At sill, install FG-5226 setting chair (2 per lite at at 1/4 points)

Seal water diverter

Detail B

Compression of Gasket at Intersections

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

DOOR INSTALLATION

5.1 PREPARATION OF DOOR FRAME

- All hardware back-up plates are installed in the frame at the factory. Door stops and transom sash will have been cut to length and prepped in the factory.
- Stock transom frames are fabricated for a vertical frame size of 120". If your opening is smaller, cut the verticals and the sash down to the appropriate length; leaving a maximum 1/4" caulk joint at the head. The prep for the transom head horizontal should be made using either a drill fixture or EZ-punch die sets for the series FG-5000 framing.
- Review frame anchor charts in N.O.A. or approved shop drawings, for configuration and substrate for which the frame will be attached. Drill anchor holes into FG-5168 door jamb, FG-5167 flat filler and TH-57 threshold as shown in charts. (Note: CW-998 bulb gasket is not required in the FG-5168 jamb at wall).

5.1.1 Attach frame portion of offset pivots to frame if applicable.

5.1.2 Apply Schnee-Morehead SM-5601 1/8" x 1/2" Isocryl tape (OBE part # 4666) to joint intersections at door header or transom bar and transom head horizontal.

Note: Keep tape away from screw splines.

5.1.3 Assemble frame and threshold with FS-8 spline screws or use alternate threshold clips and fabricate two holes in each end of threshold as shown below. Snap-in transom sash if applicable. The frame is now ready for installation.

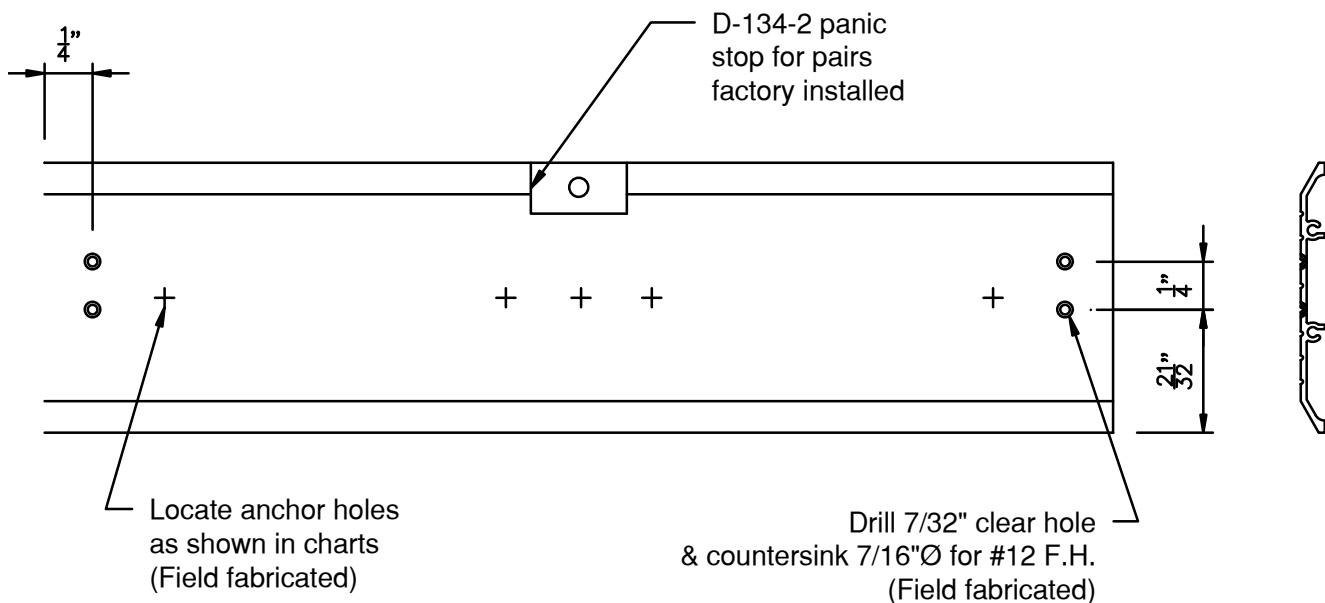


Figure 25
Threshold Fabrication

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

DOOR INSTALLATION

5.2 INSTALLATION OF DOOR FRAME

Door frame and threshold shall be completely assembled with joints neatly aligned and tight. Door frame shall be installed square and plumb. Measure frame diagonally from corner to corner and shim until the measurements are equal.

- 5.2.1 Level door frame threshold at the high point in the slab. It is preferable to not have a high point in the slab. The door frame is designed to have the jambs run down to the slab. Install fasteners through frame and threshold anchor holes and securely anchor to the substrate. Position shims between framing and substrate to prevent members from bowing.
- 5.2.2 Install door stops.

You are now ready to install the door.

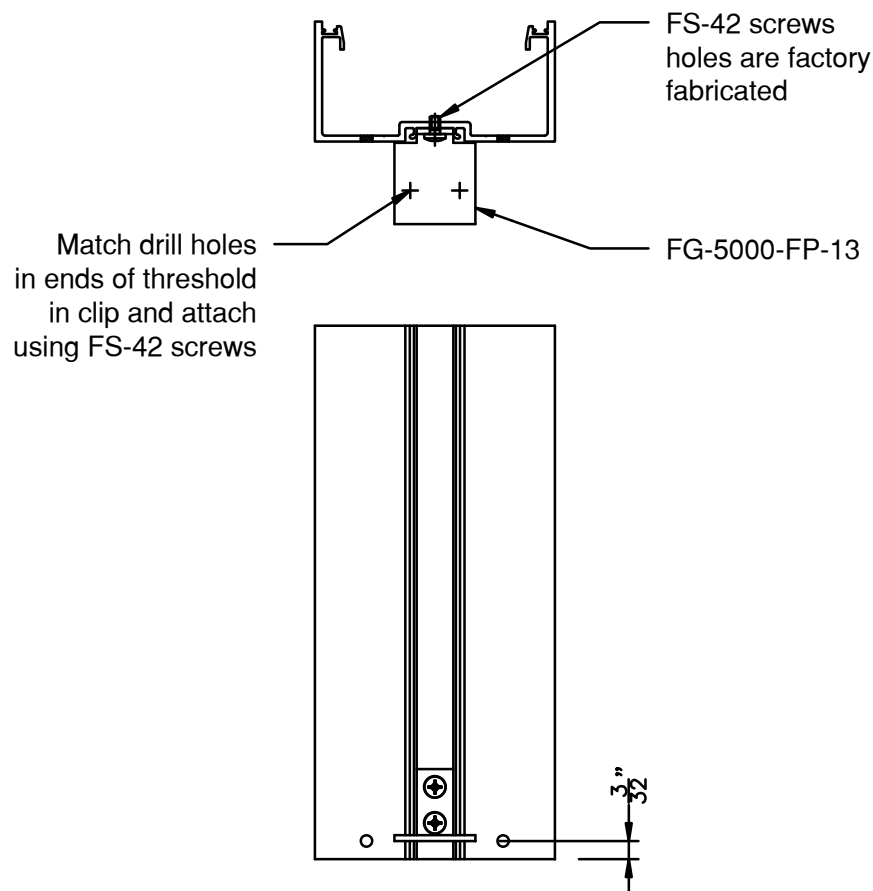


Figure 26
Alternate Threshold Attachment to Jamb

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

DOOR INSTALLATION

5.3 DOOR PREPARATION AND GLAZING

FP-5000-PP1 setting block/side block, V-2108 (1/4" x 1/4") spacer gasket, FS-114 (#8 x 3/8" PPHSMS) fasteners for attaching D-152 glass stop and FG-1133 gasket are shipped loose.

- 5.3.1 Install D-152 glass stop, this may be installed on either interior or exterior side of the door. It is recommended that D-152 be installed on the interior side of the doors receiving panic hardware to allow for reglazing without removing the panic bars.
- 5.3.2 Pilot holes are predrilled in D-152 glass stop. Determine side of door you desire to place the glass stop and match drill holes into the horizontal rails, vertical door stiles and attach with FS-114 screws.

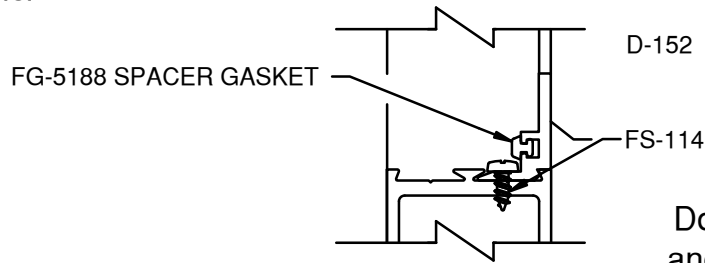


Figure 27
Door Glazing Stop
and Spacer Gasket

- 6.3.3 Install FP-5000-PP1 adhesive back setting block/side block as shown below. Blocks may be doubled as required due to glass tolerances.

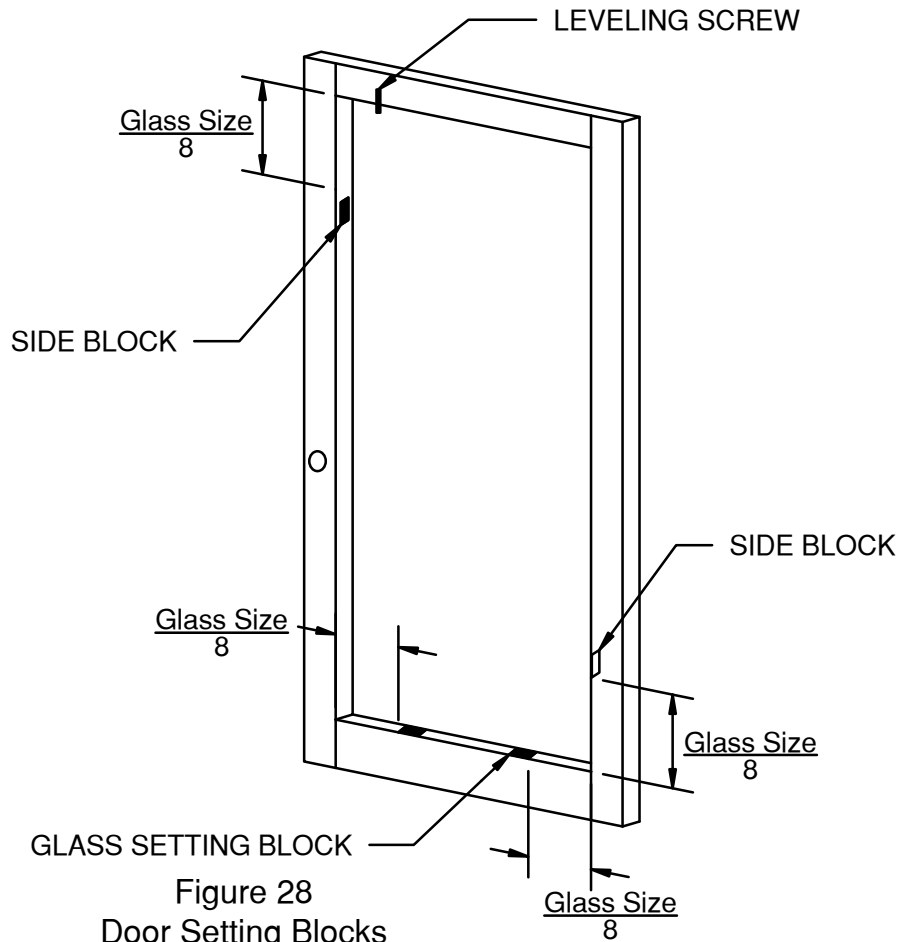


Figure 28
Door Setting Blocks

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

DOOR INSTALLATION

5.3(continued) DOOR PREPARATION AND GLAZING

- 5.3.4 Center glass in opening on setting blocks and aligned with side blocks.
- 5.3.5 Once the glass is in the correct position, screw the glass jack down to the top of the glass.
- 5.3.6 Install S-83 horizontal glass stop first.

Note: Top stops are notched to clear glass jack. Be sure to hook the stop into the dovetails on the rails and stiles; then snap into place. A mallet may be used to drive stops into place.

- 5.3.7 Roll FG-1133 gasket into S-83. See detail 'A' for cutting intersections and cutting.
- 5.3.8 Mask off glass with low adhesive masking tape and install Dow Corning 995 into the cavity between the glass and D-152 glass stop. Remove masking tape immediately after installation of silicone taking care not to damage or pull silicone from the cavity.


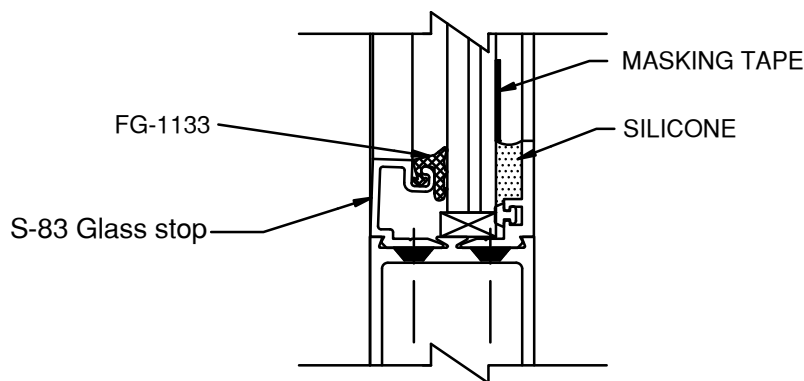


Figure 29
Door Glazing
Roll in Gasket and Sealant Application

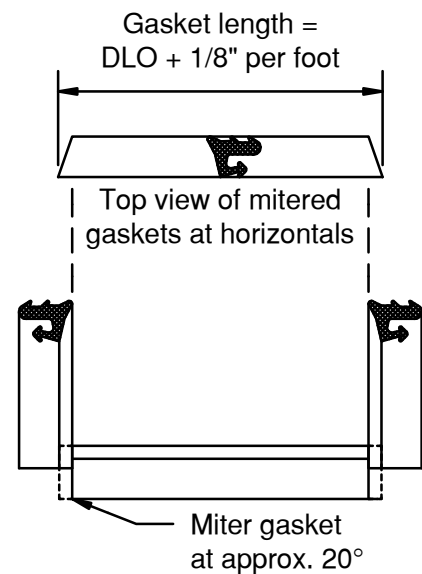

Detail A
Gasket cut at intersection

StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

DOOR INSTALLATION

5.4 ENTRANCE DOOR FRAME INSTALLATION WITH SUBSILL FOR SIDELIGHTS

When entrance occur, install entrance frames first. Subsill butts against door jamb(s). The subsill abutting the door jamb does not require an end dam.

Field Note : The bottom of the inside of the Door Jamb mullion must be sealed to the substrate and the end of the subsill must also be sealed see Figure 30 below .

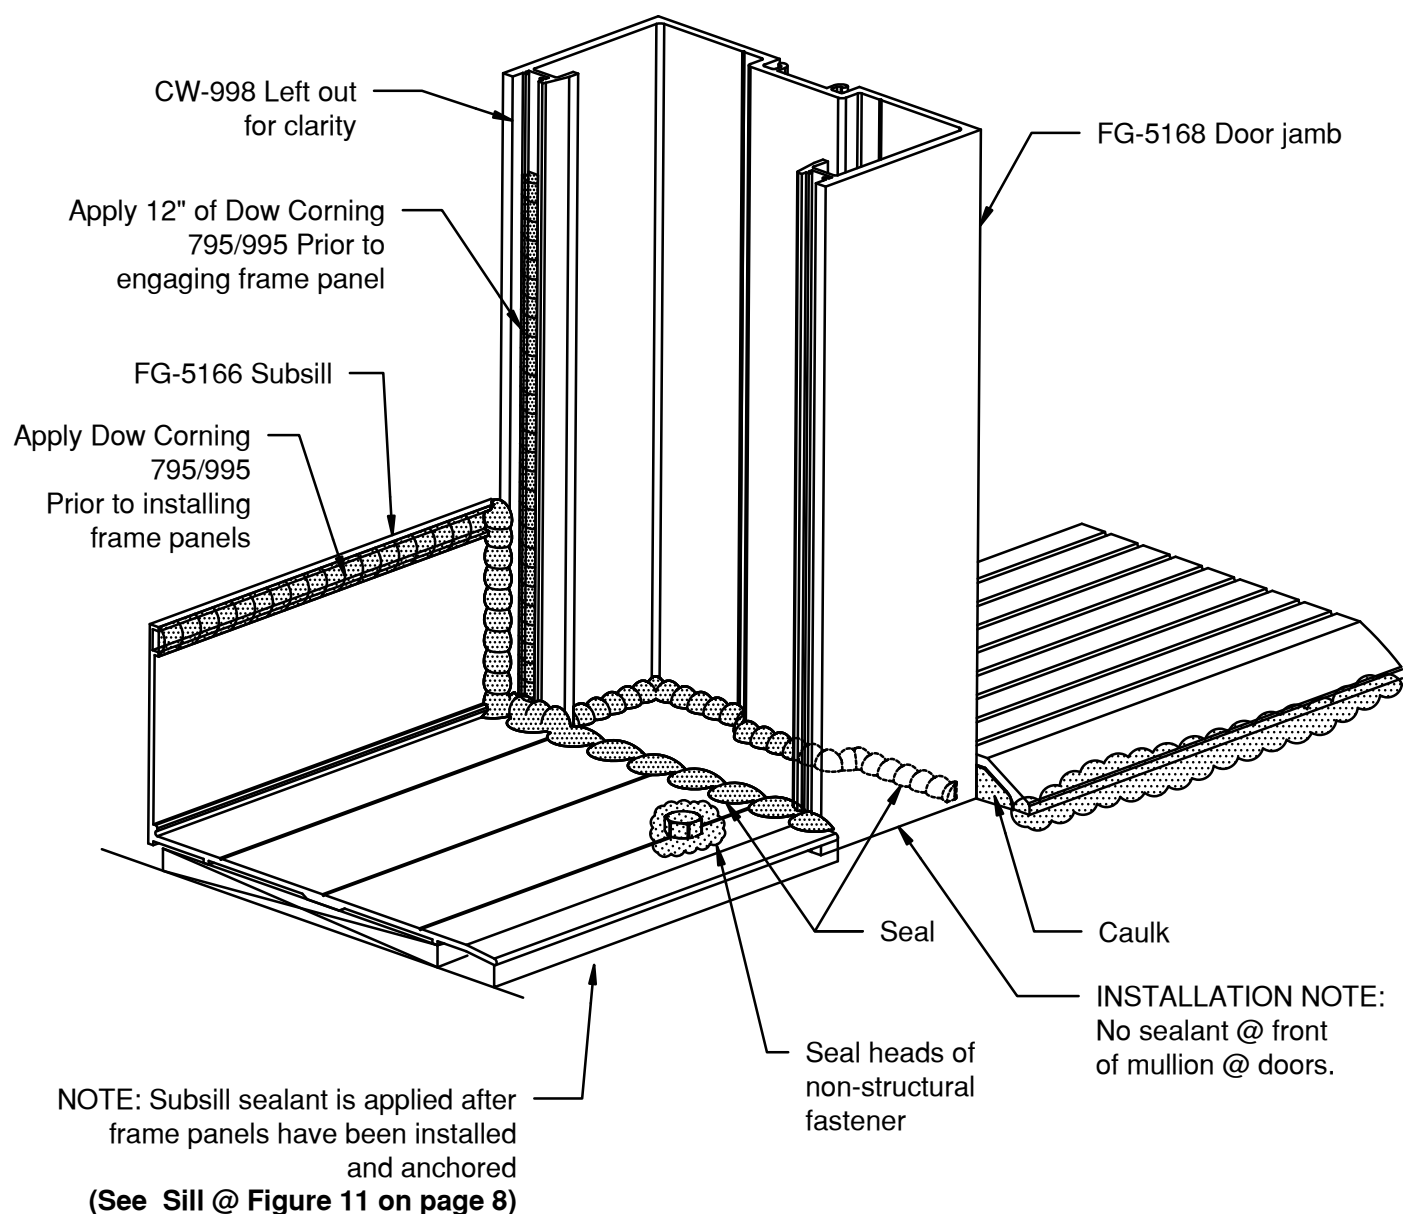










Figure 30
Door Jamb and Subsill Sealant Application












StormMax™ FG-5100T INSTALLATION AND GLAZING MANUAL

PARTS LIST

STANDARD FRAMING

FG-5100T FRAMING	
ITEM	DESCRIPTION
 FG-5216	Vertical Mullion
 FG-5218	Wall Jamb
 FG-5214	Intermediate Horizontal
 FG-5213	Head/Sill
 FG-5177	Glass Stop
 FG-5217	Pocket Filler for FG-5216
 FG-5215	Subsill Flashing
 FG-2188	PVC Flat Filler

STANDARD ACCESSORIES

FG-5100T Accessories	
ITEM	DESCRIPTION
 FG-1133	Exterior Glazing Gasket
 FG-5185	Interior Spacer Gasket Wet Glazed option
 FG-5186	Setting Block
 FG-5226	Setting Chair
 FG-5949	Dry Glazed Gasket
 FG5100-FP-5	Water Diverter
 FG5000-FP-11	Sill Flashing End Dam (Attach with 1 ea. FS-54 screws)
 FG5000-FP-13	Jamb Anchor Plate
 FS-8	#14 x 1" HHSTS Assembly Screw
 FS-56	#10-24 x 1/2" PFH Screws
 SM-5601	Joint Sealant Tape 1/8" x 1/2"